

Pad Adjustment Right & Left

3-finger stabilizer design

Six points adjustment for force distribution (Adjusta-Block)

> Tunable Clamp Force Distribution

> > Handling

Left single articulating arm/ Right single articulating arm with Flexipads/Adjusta-Blocks RH & LH







YES, with use of the Adjusta-Blocks

Loads at the tip, single and full depth for many different configurations

Left single articulating arm/ Right single articulating arm/ with shims RH & LH







YES, by adjusting the shims

Single and full depth heavy loads for general handling solutions

Left single articulating arm/ Right double articulating arm/ shims LH / Adjusta-Block RH







YES, by adjusting the shims & Adjusta-Blocks

Great for handling a variety of loads where the load maintains full contact with the pads

Left rigid arm/ Right double articulating arm/ shims LH / Adjusta-Block RH





 


(RH only)

YES, by adjusting the shims & Adjusta-Blocks

Superior at knifing between tightly stacked loads and stacking loads into tight areas













*Contact Cascade for ordering.





*Contact Cascade for ordering.

Cascade Australia Pty. Ltd. • 36 Kiln Street • Darra • QLD, 4076 • Tel. 1-800-227-223 • Fax. +61 7 3373-7333

